



# Installation Instructions

## 30" and 36" Brass and Titanium Door Panel Kit

**Brass:** ZK1BN304VRH, ZK1BN309VLH, ZK1BN364VRH, ZK1BN369VLH

**Titanium:** ZK1TN304VRH, ZK1TN309VLH, ZK1TN364VRH, ZK1TN369VLH

### ⚠ WARNING



#### Tip Over Hazard.

These appliances are top heavy, especially with any doors open, and must be secured to prevent tipping forward which could result in death or serious injury. Read and follow the entire installation instructions for securing the appliance with the anti-tip system before installing door panel kit.

### ⚠ WARNING



#### Door Trim Pinch Point Hazard

Improper installation can lead to a finger pinch point hazard between the side door trim and the cabinets when operating the door, especially with children. To minimize this risk you must follow the installation instructions for cabinet dimensions, trim assembly, and door stop angle.

## BEFORE YOU BEGIN

Read these instructions completely and carefully.

- **Note to Installer** – Be sure to leave these instructions with the Consumer.
- **Note to Consumer** – Keep these instructions with your Owner's Manual for future reference.


## ADDITIONAL PARTS PROVIDED



12x Set Screws




4x Bracket Screws



4x Washers



4x Brackets




1x Top Screw



3 Pairs of Nitrile Gloves  
(to prevent fingerprinting)

## PRODUCT DIMENSIONS

Designated Width	Actual Width	Actual Height
30	29-9/16"	91-7/8"
36	35-9/16"	91-7/8"



Actual Height

Actual Width


Door Thickness 3/4"

# Installation Instructions


**Please Note:** These Door Panels are taller than standard door panels. The required installation space is 12" taller than indicated in the Column Installation Instructions. Refer to the sections marked "DUAL INTEGRATED INSTALLATION SPACE" and "SINGLE INTEGRATED INSTALLATION SPACE" in the Column Installation Instructions. Increase the height to 96". All other dimensions remain the same.

## INSTALL DOOR PANEL


1. Remove bottom hinge cover and retain the four T30 Torx screws for later installation.

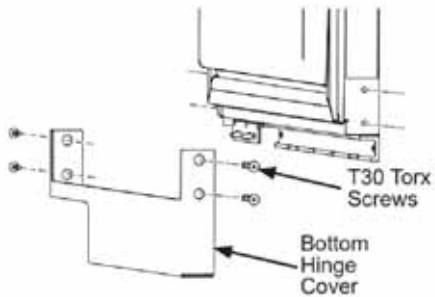

2. Open door to 90°. Slide the panel onto the door with the panel brackets interlocking on top and bottom with the door brackets (make sure not to slide the panel into the cabinetry surround). Center the panel on the door, then slowly close the door while watching to make sure the panel does not contact the surrounding cabinetry.

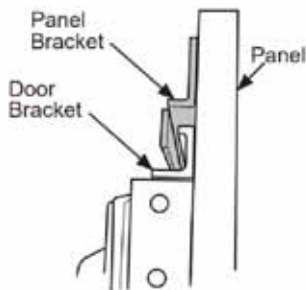

3. With the door fully closed, carefully slide the panel towards the cabinetry with the goal gap of 1/8".

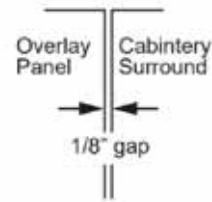

4. FOLLOW THE REMAINDER OF THE STAINLESS DOOR PANEL INSTALLATION INSTRUCTIONS IN THE UNIT INSTALLATION INSTRUCTIONS TO ADJUST AND SECURE THE DOOR PANEL.

**Note:** Instructions for this kit are also included in the full installation instructions included with the unit.